



Podešavanje rutera

Ovo je uputstvo za podešavanje PPPoE konekcije na ruteru. Adresa za pristup ruteru, username, password kao i nazivi u konfiguracionom prozoru variraju od rutera do rutera. U ovom uputstvu pokazaćemo vam kako da podesite osnovne parametre koji su standardni za sve rutere.

Kada pristupite vašem ruteru otvoriće vam se status prozor. Pod osnovnim podešavanjima (**Basic Settings**) nadjite **Network**.

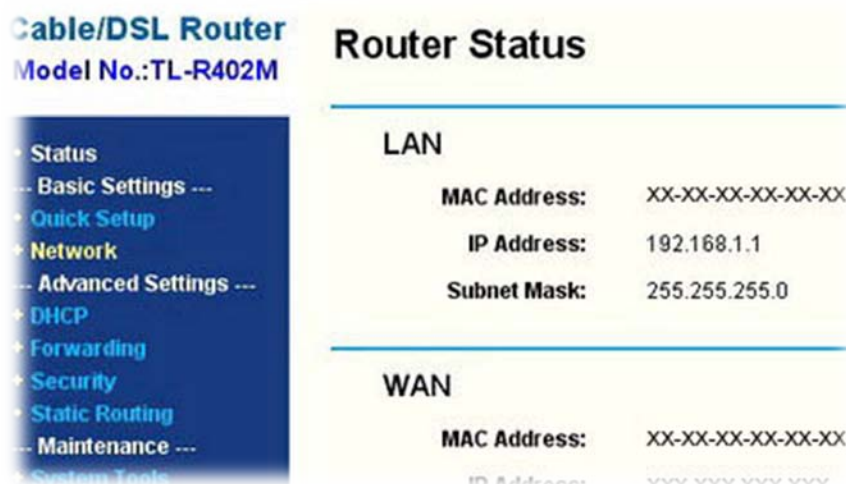

Kliknite na **Network** pa na **WAN**.

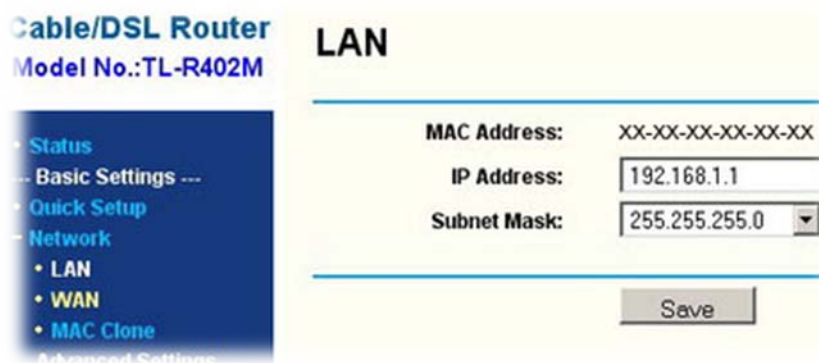

Pod **WAN Connection Type** izaberite **PPPoE**. Pod **User Name** pišete vaše korisničko ime a pod **Password** pišete lozinku koju ste dobili od MaksNet-a.

Wan Connection Mode - čekirajte **Connect Automatically**.

Kliknite **Save** pa **Advanced**.

Cable/DSL Router
Model No.:TL-R402M

WAN

WAN Connection Type:

User Name:

Password:

Wan Connection Mode: Connect on Demand
Max Idle Time: minutes (0 means rer

Connect Automatically
 Connect Manually
Max Idle Time: minutes (0 means rer

Connected!

Deo predviđen za napredna podešavanja PPPoE konekcije popunite kao na dole datom primeru.
Kliknite **Save** pa **Return**.

Cable/DSL Router
Model No.:TL-R402M

PPPoE Advanced Settings

MTU Size (in bytes): (The default is 1492, do

Service Name:

AC Name:

Use IP address specified by I

ISP specified IP Address:

Detect Online Interval: Seconds(0 ~ 120 secon

Use the following DNS Server

Primary DNS:

Secondary DNS: (Optional)

Ukoliko se ruter odmah ne poveže pod **System Tools** pronadjite **Reboot**.
Kliknite **Reboot** i ruter će se restartovati. Nakon restarta ukoliko je sve ispravno podešeno ruter će se povezati na MaksNet.

Reboot

Click this button to reboot the router.

Reboot

- Status
- Basic Settings ---
- Quick Setup
- Network
- Advanced Settings ---
- + DHCP
- + Forwarding
- + Security
- Static Routing
- Maintenance ---
- System Tools
- Firmware
- Factory Defaults
- Reboot